

Components

08/05/2026 10:35 am CEST

Details

The main components of the BNA F3 safe are: **1 - Banknote acceptor** Counts and authenticates up to 800 banknotes per minute. **2 - Control console** Consisting of a touchscreen monitor, printer, and RFID card reader. **3 - Safebag Insertion** To deposit unrecognized banknotes or other valuables. **4- Lock and Opening Handle** Under the exclusive responsibility of the security guard.



Banknote acceptor

You can identify these parts on the bill acceptor:

- **Banknote tray** Place the bills to initiate a deposit **placing them correctly**.
- **Reject Slot** Unrecognized banknotes are rejected here.
- **Upper / Lower Slot** Spaces where you can possible access to remove anystuck banknotes or foreign bodies.










Opening the Upper Compartment

To open the upper compartment, press the **green lever A** located behind the note tray and lift the compartment from the rear. To close the upper compartment, lower it until you hear a clicking sound.

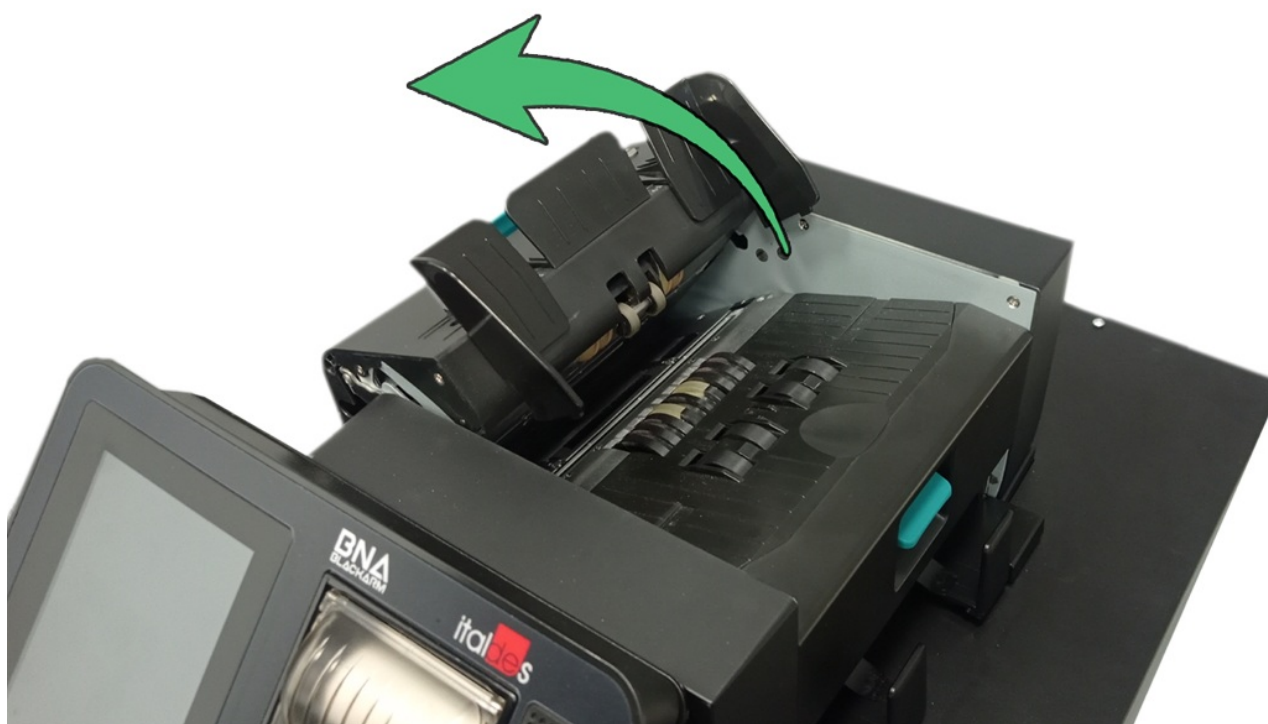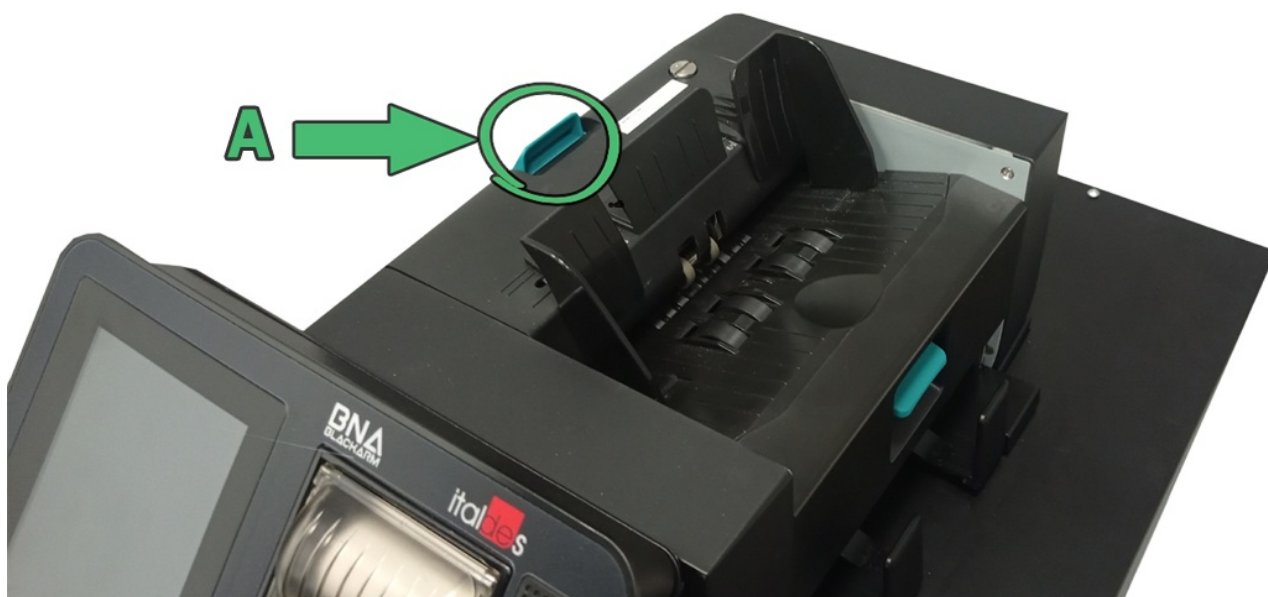


Opening the Lower Compartment

To open the lower compartment, lift the **green lever B** and lift the compartment upwards. To close the lower compartment, lower it until you hear a clicking sound.

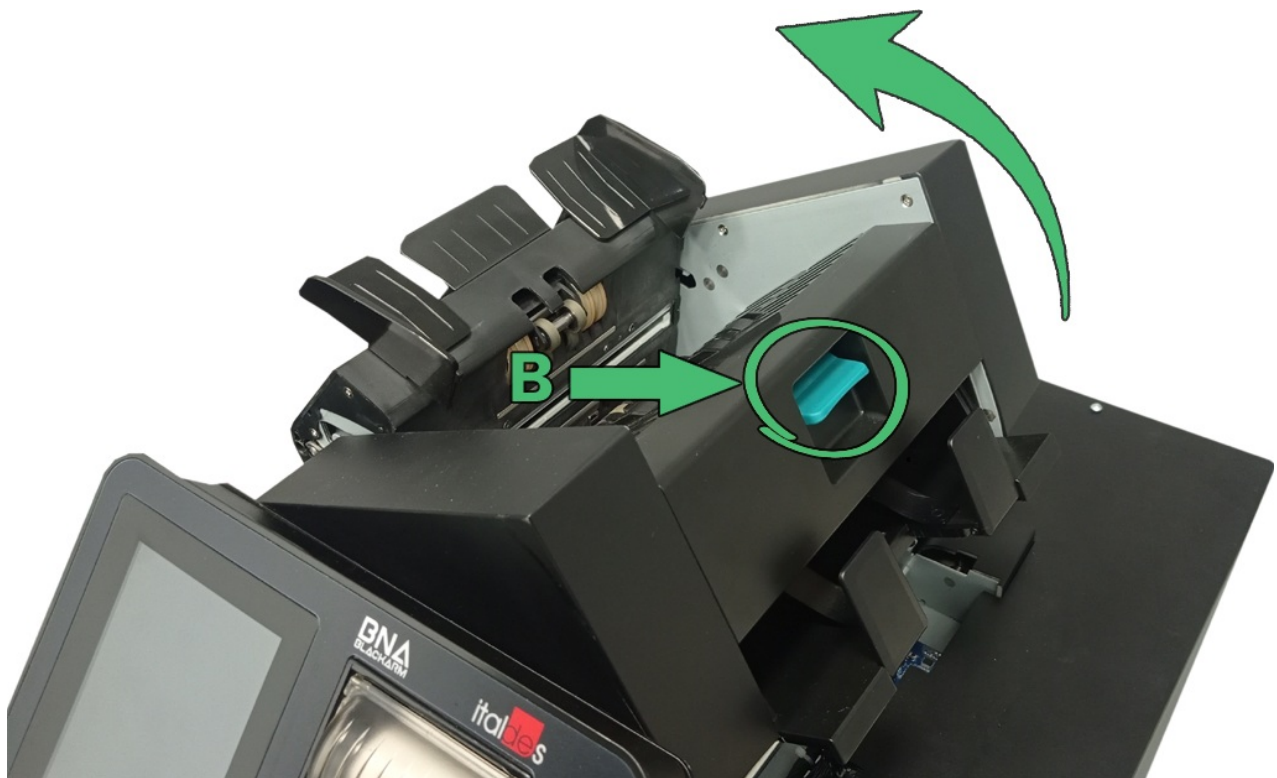

Opening the Reject Slot

To open the Reject Slot, first open the lower compartment, then press the **green lever C** and the base will lower itself. To close the Reject Slot, lift the base until it clicks into place. you will not hear a snapping noise or close the bottom compartment as described above.

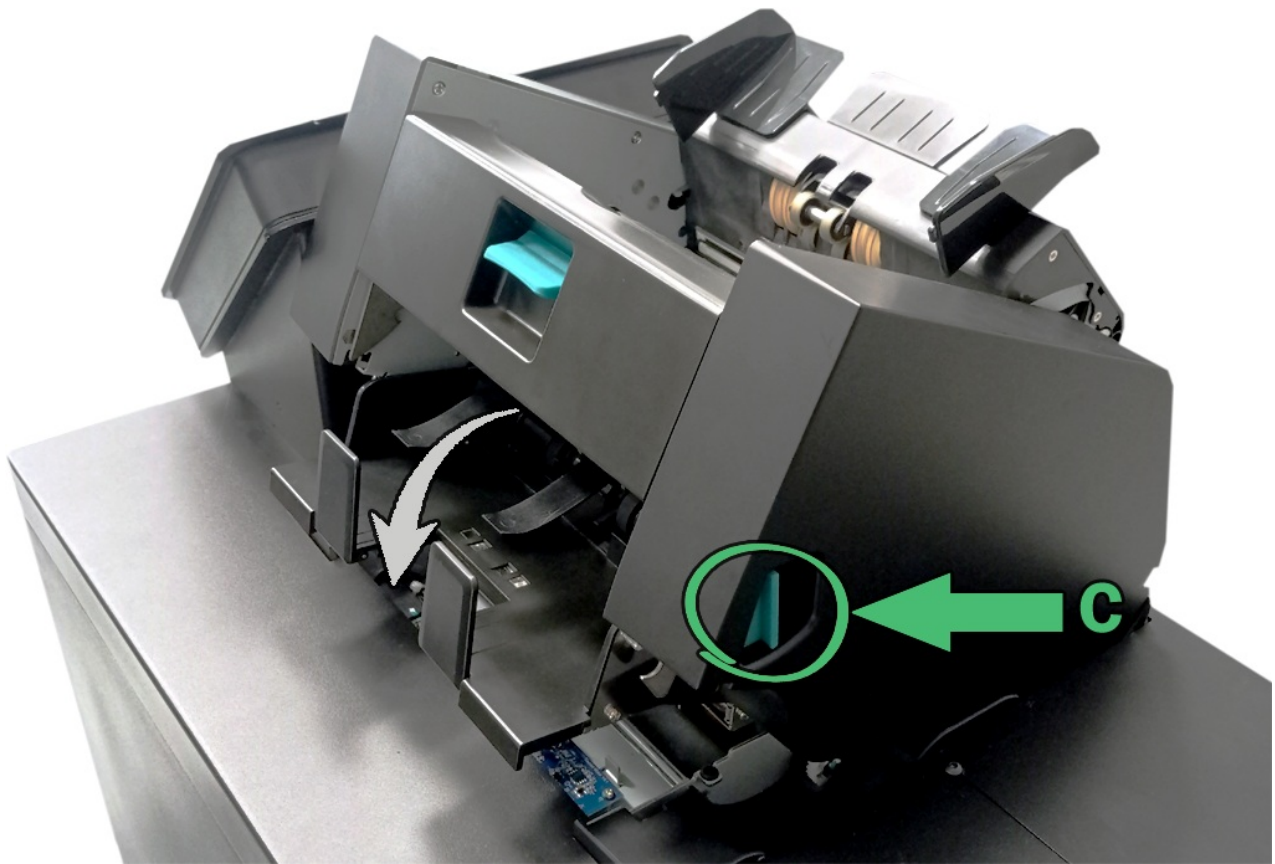

Removing stuck banknotes

By following the instructions for opening the slots, you can remove banknotes stuck inside the acceptor. Shown here are examples of banknotes stuck inside the acceptor, found after opening the corresponding slot. Once you've removed the banknotes and closed all the compartments, you'll need to tap the following button on the monitor:



(click the button above for specifications)

Banknote stopped in the upper compartment:



Banknote stopped in the lower compartment:



Banknote stuck in the Reject Slot:



Control Console

The console contains these components:

5 - Touch Screen Monitor

6 - Thermal printer Uses rolls of thermal paper 57mm x 40m x 12mm.

7 - RFID Card Reader Hold cards here to access the functions.

8 - Barcode Scanner Hold barcodes here to scan them read.

ON/OFF Console on off button.

