

Login

Introduction

To be able to use the BNA F3 safe è necessary to identify yourself via an RFID CARD and/or a CODE.

The home screen è indication of the type of access enabled:

Access via RFID tag




SERIAL NO.
12345671

NOTIFICATIONS
▼

VIDEO
TUTORIAL

PLACE THE CARD

PLACE THE CARD
ON THE RFID READER

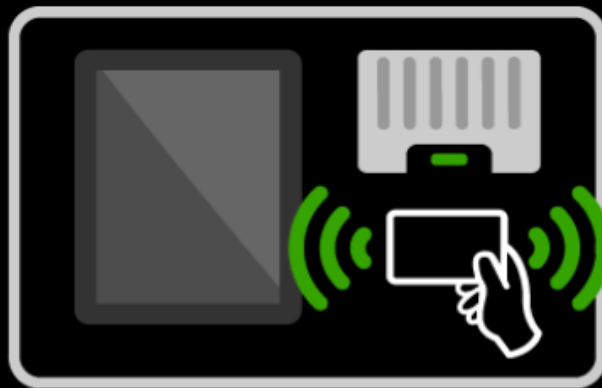

Access via RFID Card or Code




SERIAL NO.
12345677

NOTIFICATIONS
▼

VIDEO
TUTORIAL

PLACE THE CARD

PLACE THE CARD
ON THE RFID READER

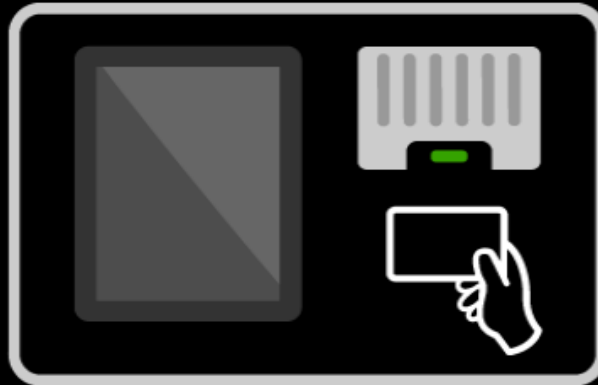

DEPOSIT
ACCESS WITH CODE

PRESS NEXT TO CONTINUE



NEXT

Access with card

To be read, RFID cards must be placed in the area below the printer on the control console (7).

Correct reading of the cards will be confirmed by a "BEEP" sound.

Each card has a 6-digit serial number and a dedicated function:

DEPOSIT Card for depositing.

SUPERVISOR Card for advanced functions and printing.

WITHDRAWAL Card reserved for the transport of valuables.



Access with code

After tapping the Next button on the home screen:

Enter your user code and tap the NEXT button. Depending on your cash register configuration, this will be the default. You can then [start depositing](#). Otherwise, additional personalized customer data may be requested, such

as slip code, receipt code, cashier number, etc.

The screenshot shows a mobile application interface with a dark background. At the top, there is a header bar with three sections: a menu icon and 'SERIAL NO. 12345677', a 'NOTIFICATIONS' button with a downward arrow, and a 'VIDEO TUTORIAL' button. Below the header, the main text reads 'ENTER THE USER CODE:' in large, bold, white capital letters. Underneath this, it says 'PRESS NEXT TO CONFIRM' in smaller white capital letters. A white rectangular box in the center contains the number '1111'. Below the box is a numeric keypad with digits 1-0, followed by a QWERTY keyboard layout with letters and a backspace key. At the bottom, there are two large circular buttons: a left arrow labeled 'BACK' and a right arrow labeled 'NEXT'.

SERIAL NO. 12345677

NOTIFICATIONS

VIDEO TUTORIAL

ENTER THE USER CODE:

PRESS NEXT TO CONFIRM

1111

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L -

⌫ Z X C V B N M ✕

BACK

NEXT

If enabled by the cash register configuration, the PIN associated with the previously entered user code will also be requested. If you know the PIN associated with the user code, you can change it by tapping the "Change PIN" button.



SERIAL NO.
12345672

NOTIFICATIONS
▼

VIDEO
TUTORIAL

ENTER THE PIN CODE:
USER PIN

1

2

3

4

5

6

7

8

9

.

0







BACKCHANGE PIN