


Safebag deposit - BNA F3

Selecting SAFE BAG DEPOSIT indicates the type of value placed in the safebag that, ONCE registration is complete, you will insert into the BNA F3 safe through the appropriate slot [\(3\)](#).


- **BANKNOTES** Banknotes that the acceptor rejects because they are very dirty, worn, damaged, or foreign currency (depends on the type of configuration.)
- **COINS** Note: The BNA F3 safe is not Designed to accommodate hundreds/thousands of coins.
- **CHECKS**

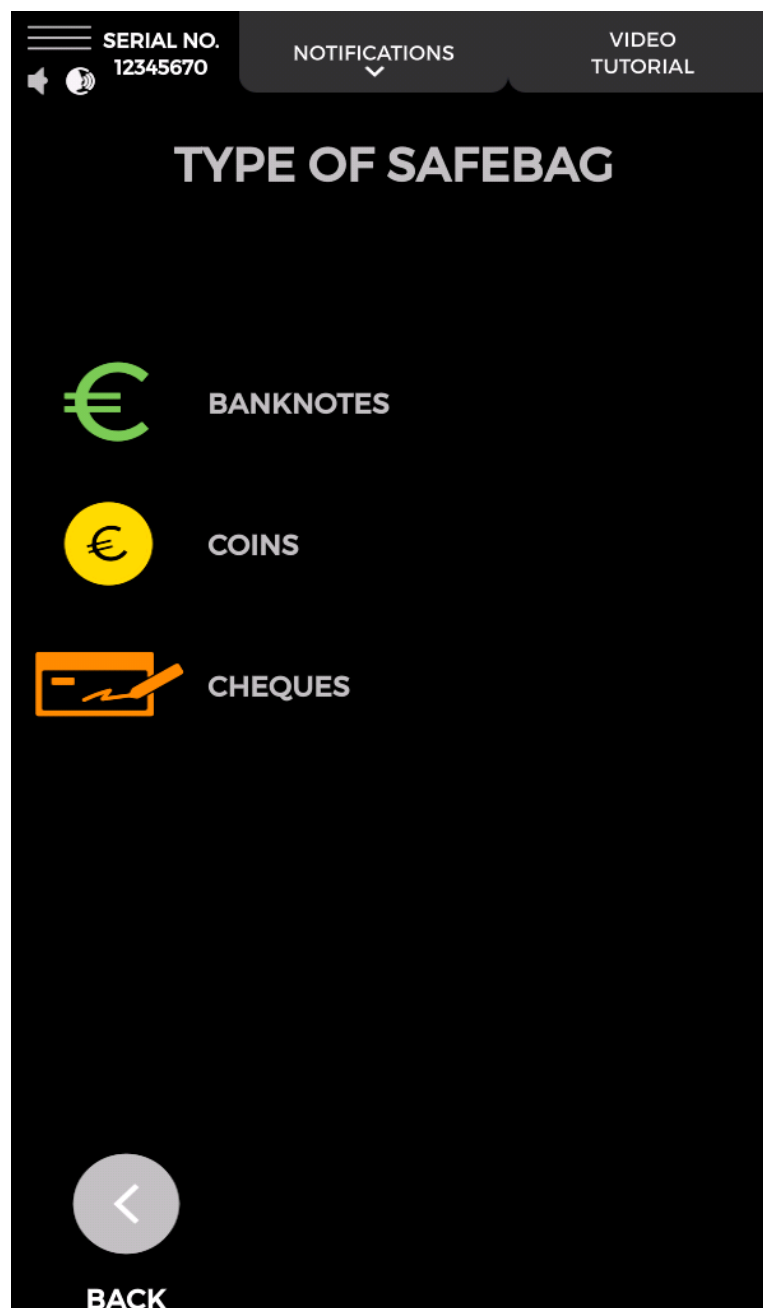

Registration

To register the safebag code you can use the Barcode Scanner positioned under the console or enter it manually with the alphanumeric keyboard on the monitor.

To proceed, press NEXT.

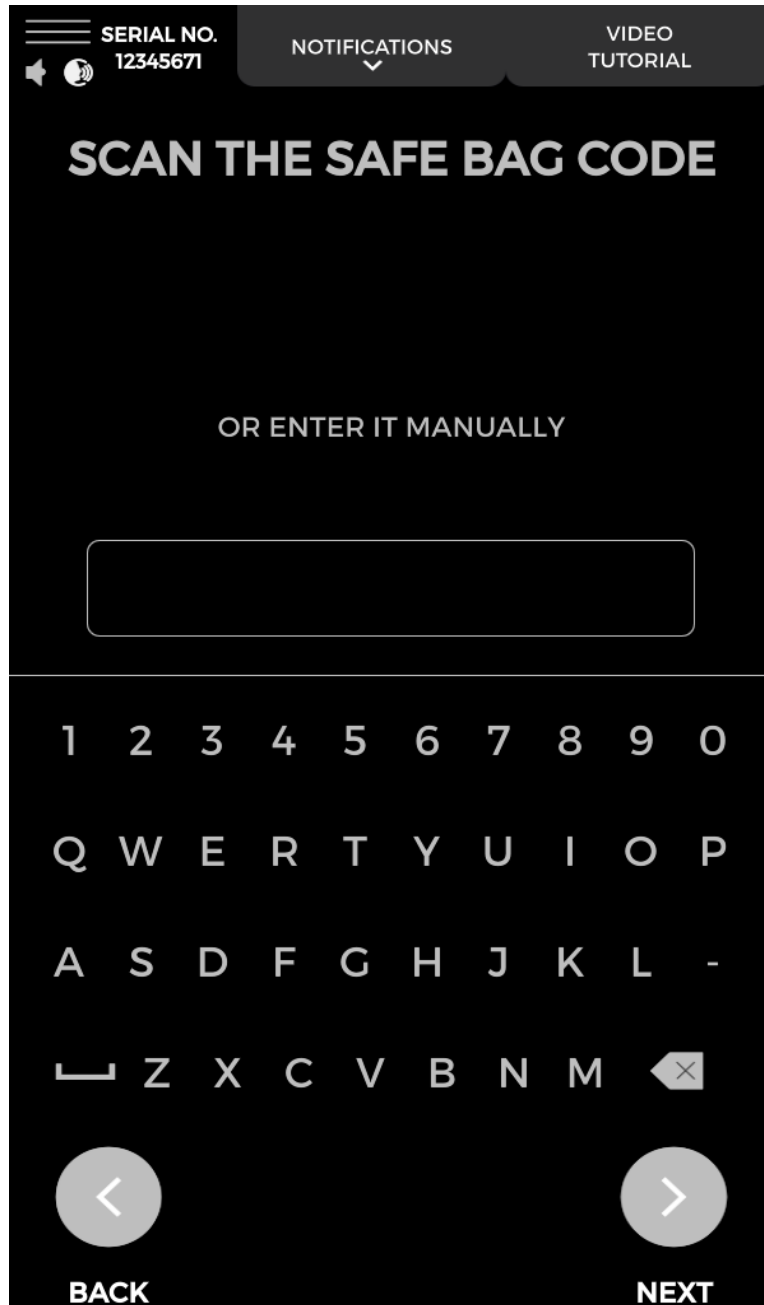

The registration screen features a dark background with white text and icons. At the top left, there is a menu icon (three horizontal lines) and a speaker icon. To the right of the menu icon, the text 'SERIAL NO.' is displayed above the value '12345671'. Further right, there are two tabs: 'NOTIFICATIONS' with a downward arrow icon, and 'VIDEO TUTORIAL'. The main heading 'SCAN THE SAFE BAG CODE' is centered in a large, bold font. Below this, the text 'OR ENTER IT MANUALLY' is centered. A large, empty rectangular input field is positioned below the text. At the bottom of the screen is a full QWERTY alphanumeric keyboard. The keyboard has four rows of keys: the first row contains numbers 1-0; the second row contains letters Q-P; the third row contains letters A-L and a hyphen/underscore key; the fourth row contains a left arrow key, letters Z-M, and a right arrow key with an 'x' icon. At the very bottom, there are two large circular buttons: the left one contains a left arrow and is labeled 'BACK'; the right one contains a right arrow and is labeled 'NEXT'.

SERIAL NO.
12345671

NOTIFICATIONS

VIDEO TUTORIAL

SCAN THE SAFE BAG CODE

OR ENTER IT MANUALLY

1 2 3 4 5 6 7 8 9 0

Q W E R T Y U I O P

A S D F G H J K L -


← Z X C V B N M →

BACK NEXT

Banknotes

Select the currency of the banknotes you insert into the safebag.

To proceed, press NEXT.

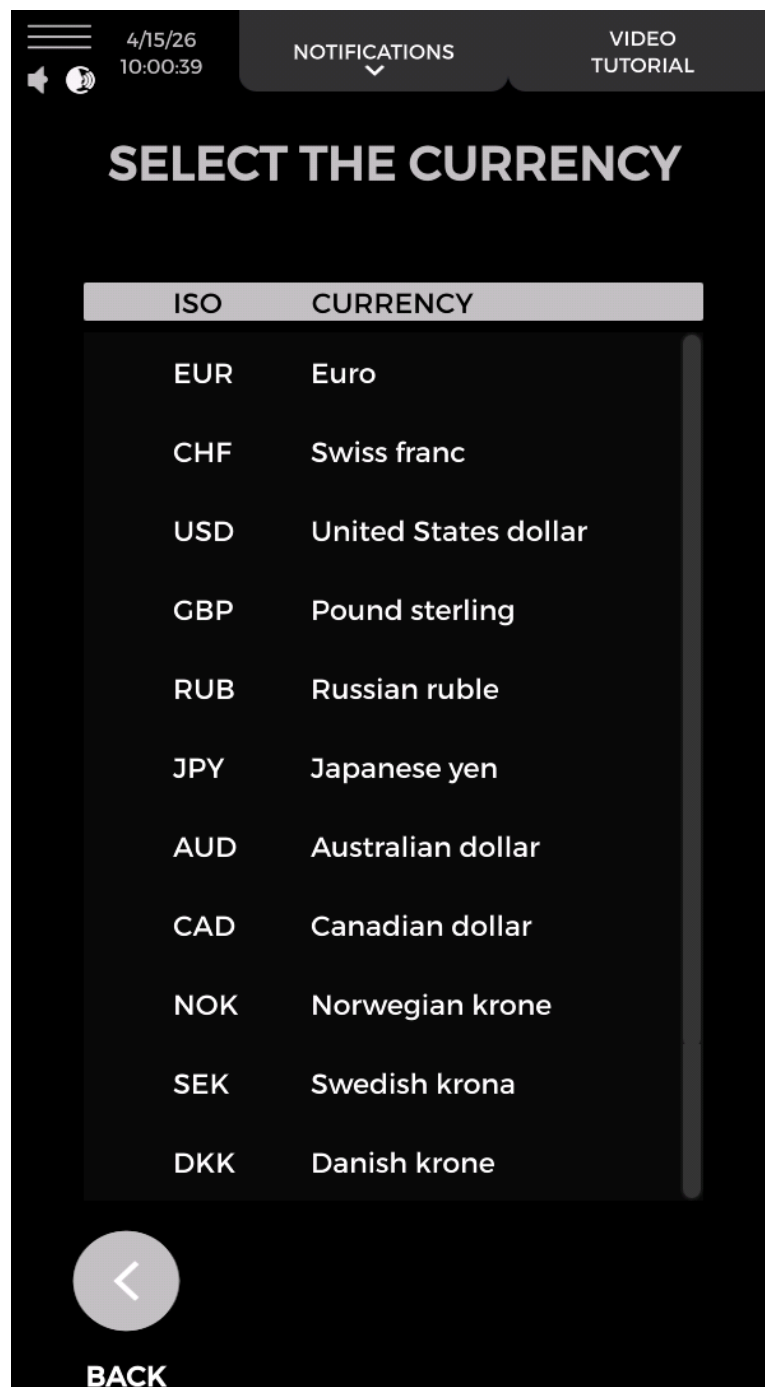

Quantity Banknotes

Increment with “ + ” or decrease with “ - ” the number of banknotes per denomination, which you insert into the safebag.

25/11/24
15:32:34

NOTIFICATIONS
▼

VIDEO
TUTORIAL

ENTER THE AMOUNT OF THE
SAFE BAG

SAFEBAG TOTAL

0

5.00

X

0

=

0.00

⊖

⊕

10.00

X

0

=

0.00

⊖

⊕

20.00

X

0

=

0.00

⊖

⊕

50.00

X

0

=

0.00

⊖

⊕

100.00

X

0

=

0.00

⊖

⊕

200.00

X

0

=

0.00

⊖

⊕

500.00

X

0

=

0.00

⊖

⊕

<

>

BACK

NEXT

Check

Enter the check number you're placing in the safebag.

If the check number has a barcode, you can use the barcode reader located under the console.

To proceed, press NEXT.



SERIAL NO.
12345671

NOTIFICATIONS
▼

VIDEO
TUTORIAL

ENTER THE CHECK NUMBER

12134567890

1234567890

QWERTYUIOP

ASDFGHJKL-

⌵ZXCVBNM⌵

<

>

BACK

NEXT

Check Amount

Type the amount of the check you place in the safebag.

To proceed, press NEXT.



SERIAL NO.
12345671

NOTIFICATIONS
▼

VIDEO
TUTORIAL

ENTER THE CHECK AMOUNT

MAX AMOUNT €
25,000.00

1250

1

2

3

4

5

6

7

8

9

,

0







BACKNEXT

Finish Deposit

The final registration screen summarizes the declared amount you deposited into the safe using the safebag.

Press BACK to change the registration or the safebag amount.

To finish and print the receipt, press NEXT.

