

Supervisor - BNA SMALL

Supervisor Access

To access the Supervisor Menu, place the Supervisor card on the RFID card reader of the Console.



Supervisor PIN

Once the Supervisor card has been scanned, you will be asked for the PIN code associated with the Supervisor card you are using. If the Supervisor card PIN is the standard "1234," you will be asked if you want to change it. If you don't remember your PIN code, contact support.



SERIAL NO.
12345672

NOTIFICATIONS
▼

VIDEO
TUTORIAL

ENTER THE PIN CODE:
USER PIN

1

2

3

4

5

6

7

8

9

.

0



BACK



CHANGE PIN



SERIAL NO.
12345672

NOTIFICATIONS
▼

VIDEO
TUTORIAL

ENTER THE PIN CODE:
USER PIN



**YOU ARE USING A
STANDARD PIN
DO YOU WANT TO
CHANGE IT?**

< NO

YES >



BACK



CHANGE PIN