

Access with card - BNA SMALL

06/05/2026 3:42 pm CEST

To be read, RFID cards must be placed in the area below the printer on the control console (7).

Correct reading of the cards will be confirmed by a "BEEP" sound.

Each card has a 6-digit serial number and a dedicated function:

DEPOSIT

Card for depositing.

SUPERVISOR

Card for advanced functions and printing.

WITHDRAWAL

Card reserved for the transport of valuables.

