


Safebag deposit - BNA SMALL

06/05/2026 5:03 pm CEST

Selecting SAFE BAG DEPOSIT

indicates the type of value placed in the safebag that, ONCE registration is complete, you will insert into the BNA SMALL safe through the appropriate slot (3).


- **BANKNOTES**
Banknotes that the acceptor rejects because they are very dirty, worn, damaged, or foreign currency (depends on the type of configuration.)
- **COINS**
Note: The BNA F3 safe is not Designed to accommodate hundreds/thousands of coins.
- **CHECKS**

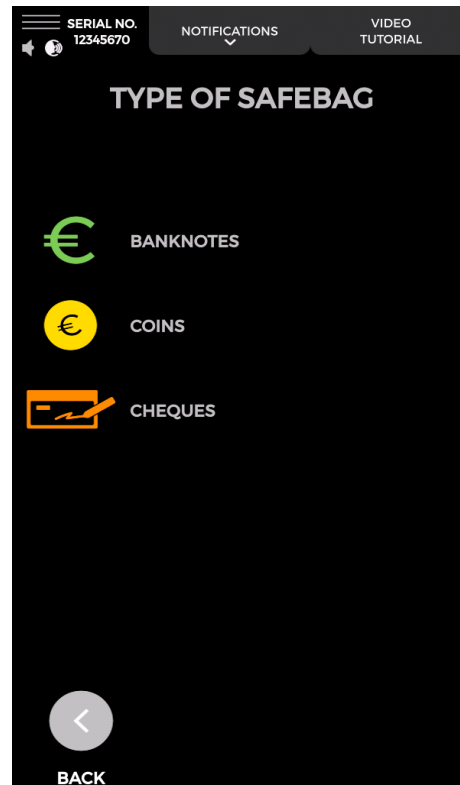

Registration

To register the safebag code you can use the Barcode Scanner positioned under the console or enter it manually with the alphanumeric keyboard on the monitor.

To proceed, press NEXT.

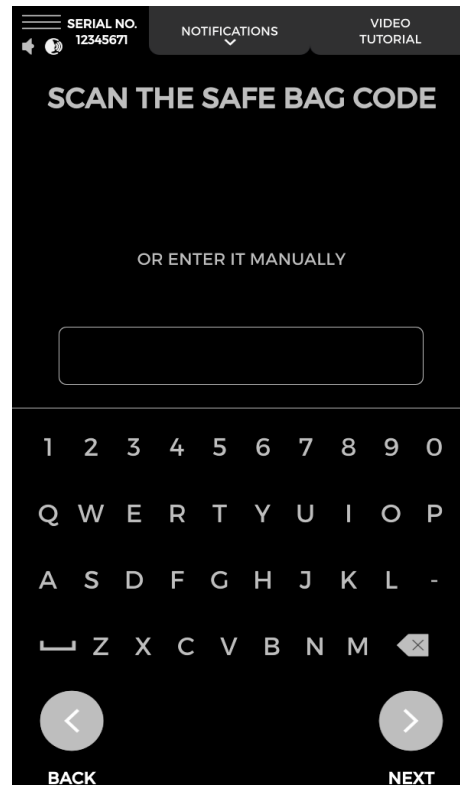

The image shows a mobile application interface for registering a safebag code. At the top, there is a status bar with a hamburger menu icon, a speaker icon, and a profile icon. Below this, the text "SERIAL NO. 12345671" is displayed. To the right of the serial number are two tabs: "NOTIFICATIONS" with a downward arrow and "VIDEO TUTORIAL". The main heading is "SCAN THE SAFE BAG CODE". Below this, there is a sub-heading "OR ENTER IT MANUALLY" and a large, empty rectangular input field. At the bottom of the screen is a full QWERTY alphanumeric keyboard. Below the keyboard are two circular buttons: a left arrow button labeled "BACK" and a right arrow button labeled "NEXT".

Banknotes


Select the currency of the banknotes you insert into the safebag.

To proceed, press NEXT.



Quantity Banknotes

Increment with “ + ” or decrease with “ - ” the number of banknotes per denomination, which you insert into the safebag.

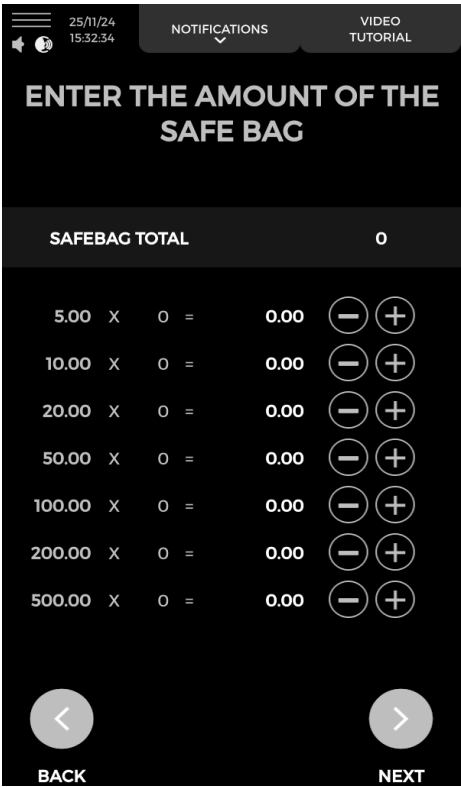

Check

Enter the check number you're placing in the safebag.

If the check number has a barcode, you can use the barcode reader located under the console.


To proceed, press NEXT.

The image shows a mobile application interface with a dark theme. At the top, there is a header bar with three sections: a menu icon and 'SERIAL NO. 12345671', a 'NOTIFICATIONS' button with a downward arrow, and a 'VIDEO TUTORIAL' button. Below the header, the main screen has the title 'ENTER THE CHECK NUMBER' in white capital letters. In the center, there is a white rectangular input field containing the number '12134567890'. Below the input field is a numeric keypad with digits 1-0, followed by a QWERTY keyboard layout. At the bottom of the screen, there are two large circular buttons: a left arrow button labeled 'BACK' and a right arrow button labeled 'NEXT'.

Check Amount

Type the amount of the check you place in the safebag.

To proceed, press NEXT.

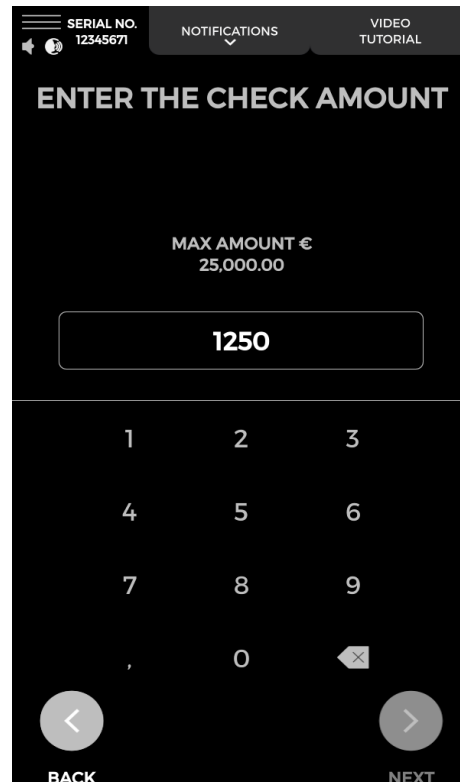


The screen displays the title "ENTER THE CHECK AMOUNT" in white text on a black background. At the top, there is a status bar with a menu icon, a speaker icon, and the text "SERIAL NO. 12345671". To the right of the status bar are two buttons: "NOTIFICATIONS" with a downward arrow and "VIDEO TUTORIAL". Below the title, the text "MAX AMOUNT € 25,000.00" is displayed. A large white rectangular input field contains the number "1250". Below the input field is a numeric keypad with digits 1 through 9, a comma, and a zero. To the right of the zero is a delete button with a left arrow and an 'x'. At the bottom of the screen are two circular buttons: a left arrow labeled "BACK" and a right arrow labeled "NEXT".

Finish Deposit

The final registration screen summarizes the declared amount you deposited into the safe using the safebag.

Press BACK to change the registration or the safebag amount.

To finish and print the receipt, press NEXT.

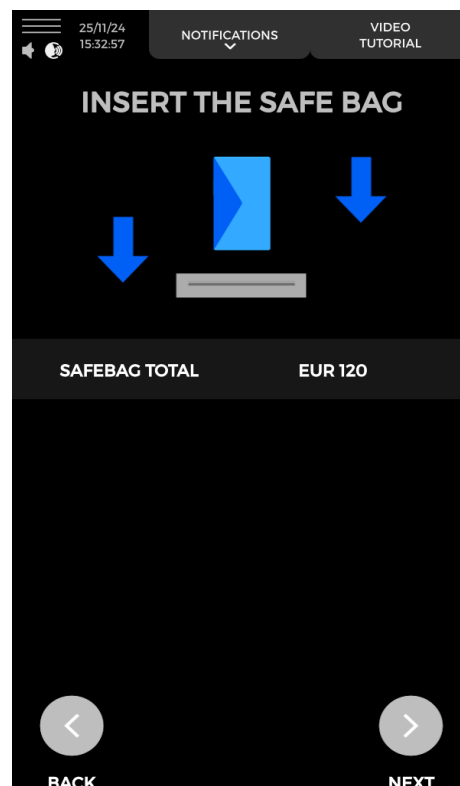

The screen displays the title "INSERT THE SAFE BAG" in white text on a black background. At the top, there is a status bar with a menu icon, a speaker icon, and the text "25/11/24 15:32:57". To the right of the status bar are two buttons: "NOTIFICATIONS" with a downward arrow and "VIDEO TUTORIAL". Below the title, there is a graphic showing a blue square with a white arrow pointing down into a grey rectangular slot, with two blue arrows pointing down on either side. Below the graphic, the text "SAFE BAG TOTAL" is displayed in white, followed by "EUR 120" in white. At the bottom of the screen are two circular buttons: a left arrow labeled "BACK" and a right arrow labeled "NEXT".