
Login

Introduction

To be able to use the BNA F safe è necessary to identify yourself via an **RFID CARD** and/or a **CODE.**

The home screen è indication of the type of access enabled:

Access via RFID tag

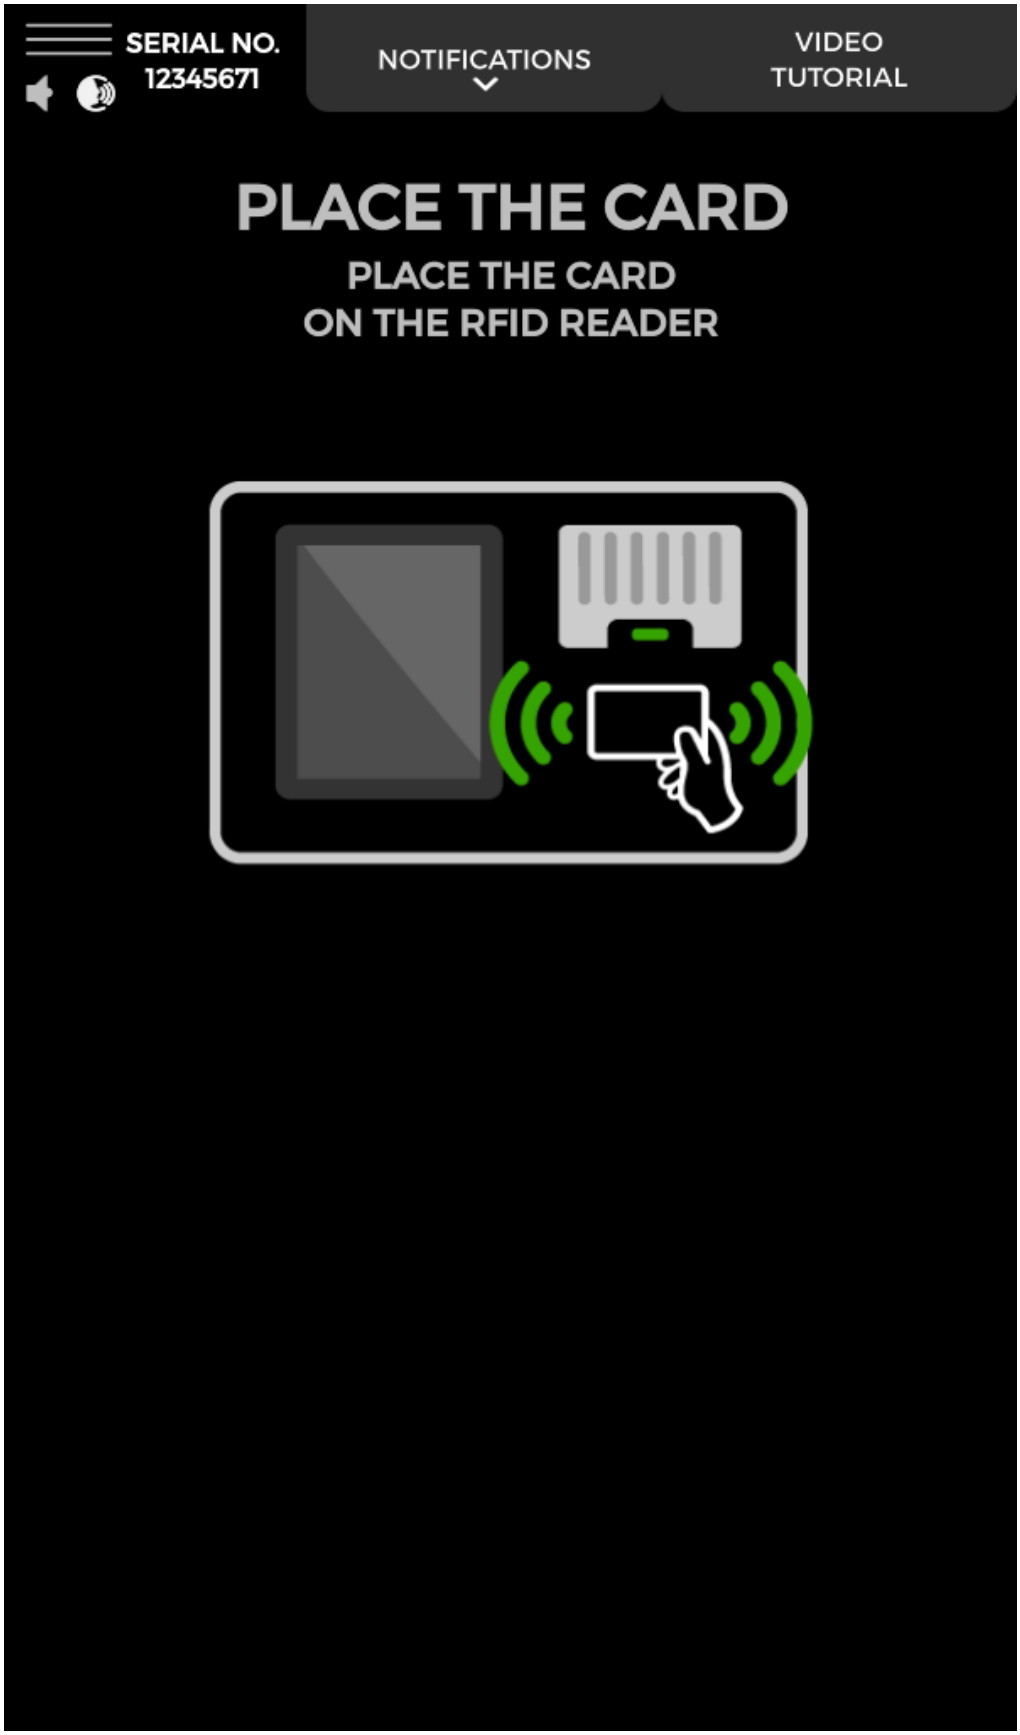

Access via RFID Card or Code



Access with card

To be read, RFID cards must be placed in the area below the printer on the **control console (7).**

Correct reading of the cards will be confirmed by a "**BEEP**" sound.

Each card has a 6-digit serial number and a dedicated function:

DEPOSIT Card for depositing.

SUPERVISOR Card for advanced functions and printing.

WITHDRAWAL Card reserved for the transport of valuables.








Access with code

After tapping the Next button on the home screen:

Enter your user code and tap the NEXT button. Depending on your cash register configuration, this will be the default. You can then **start depositing**. Otherwise, additional personalized customer data may be requested, such as slip code, receipt code, cashier number, etc.

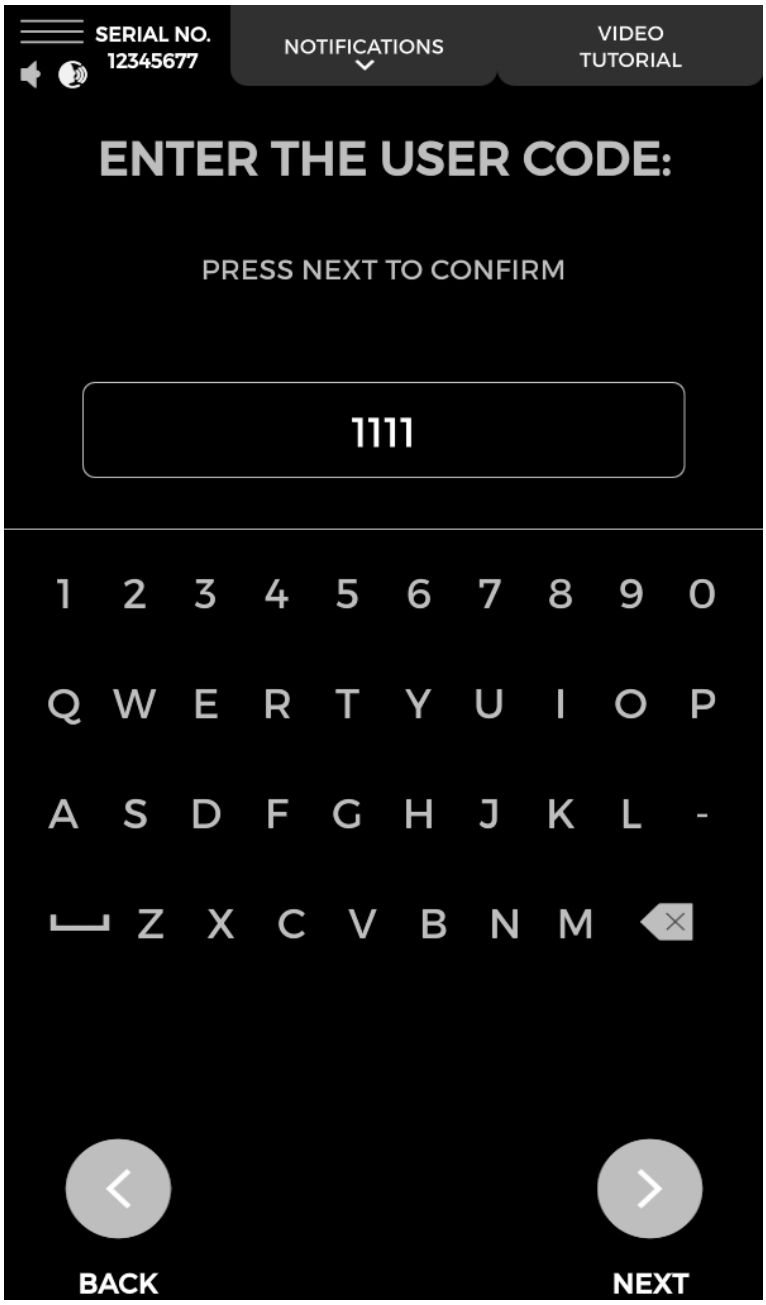

If enabled by the cash register configuration, the PIN associated with the previously entered user code will also be requested. If you know the PIN associated with the user code, you can change it by tapping the "Change PIN" button.

