Safebag deposit - BNA F

Selecting SAFEBAG DEPOSIT indicates the type of value placed in the safebag that, ONCE registration is complete, you will insert into the BNA F safe through the appropriate slot **(3).**


- BANKNOTES Banknotes that the acceptor rejects because they are very dirty, worn, damaged, or foreign currency (depends on the type of configuration.)
- COINS Note: The BNA F safe is not Designed to accommodate hundreds/thousands of coins.
- CHECKS



Registration

To register the safebag code you can use the Barcode Scanner positioned under the console or enter it manually with the alphanumeric keyboard on the monitor.

To proceed, press NEXT.

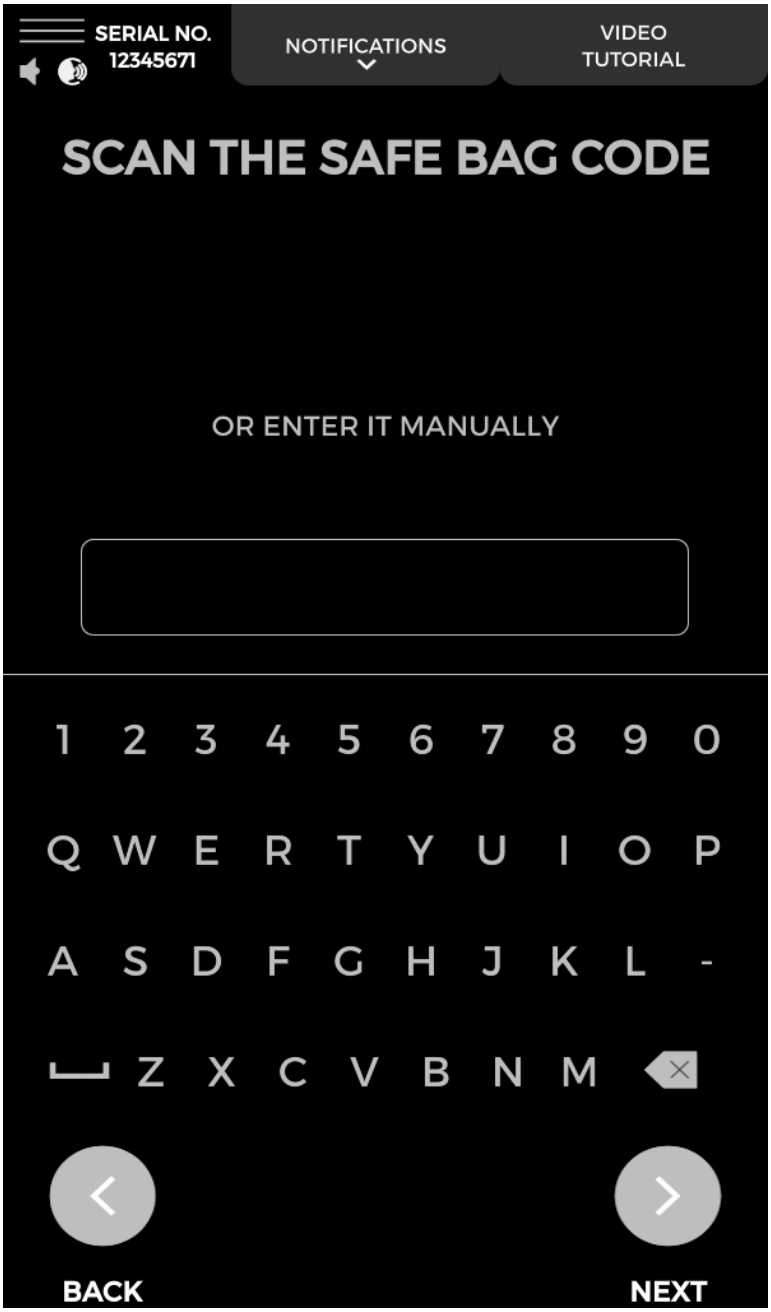

Banknotes


Select the currency of the banknotes you insert into the safebag.

To proceed, press NEXT.



Quantity Banknotes

Increment with “ + ” or decrease with “ - ” the number of banknotes per denomination, which you insert into the safebag.

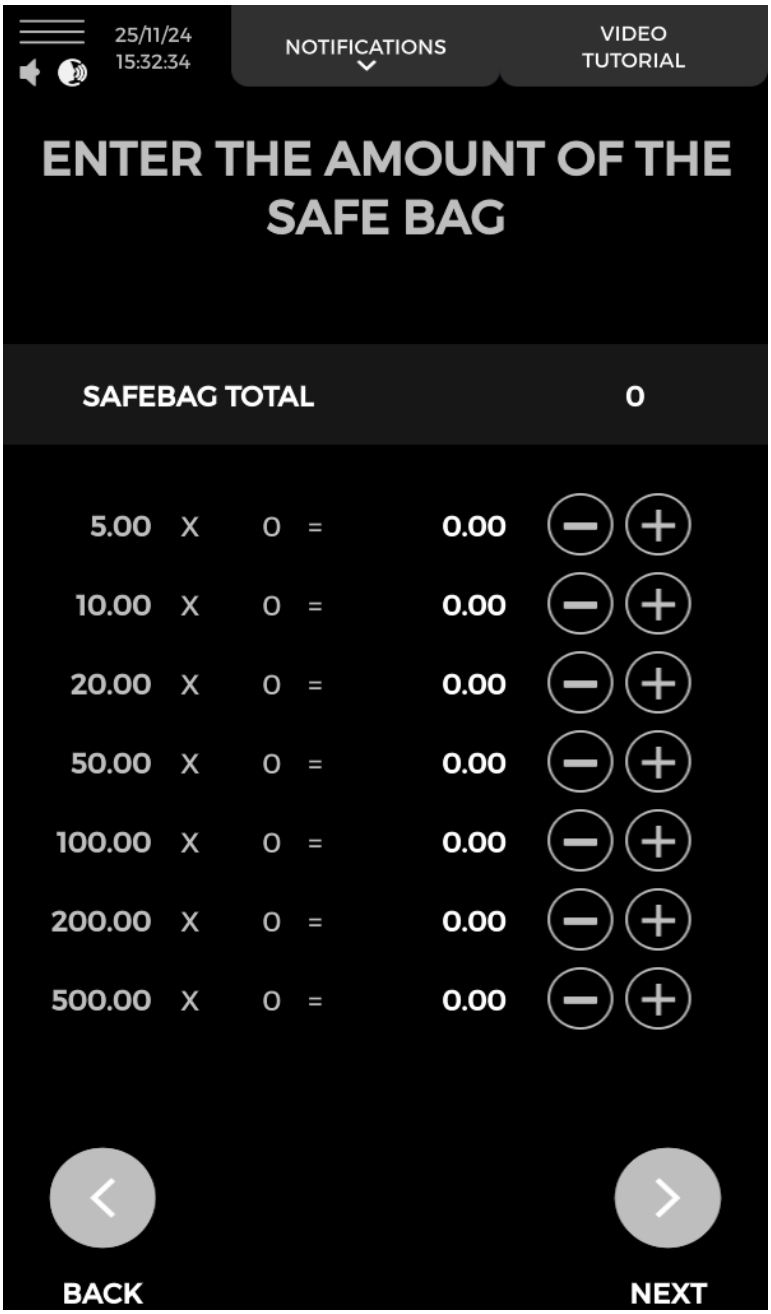


Check

Enter the check number you're placing in the safebag.

If the check number has a barcode, you can use the barcode reader located under the console.


To proceed, press NEXT.

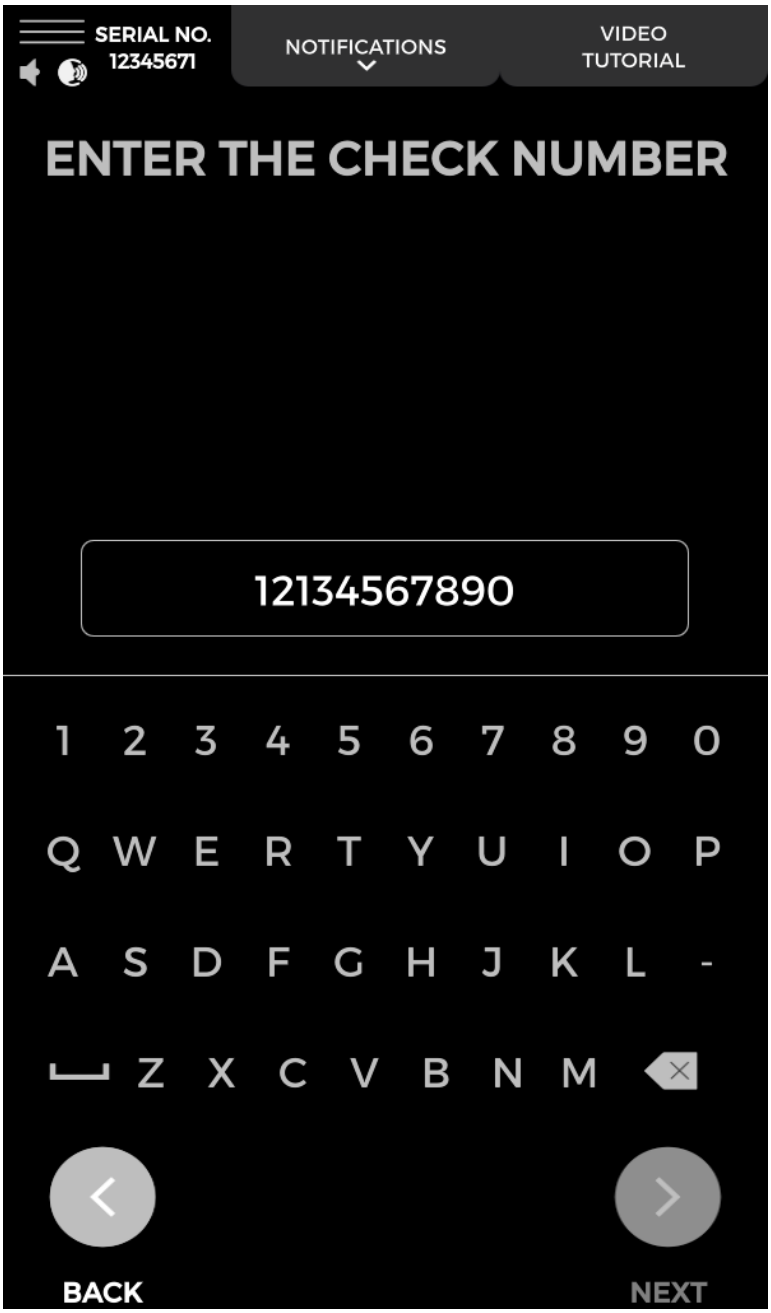

Check Amount

Type the amount of the check you place in the safebag.

To proceed, press NEXT.

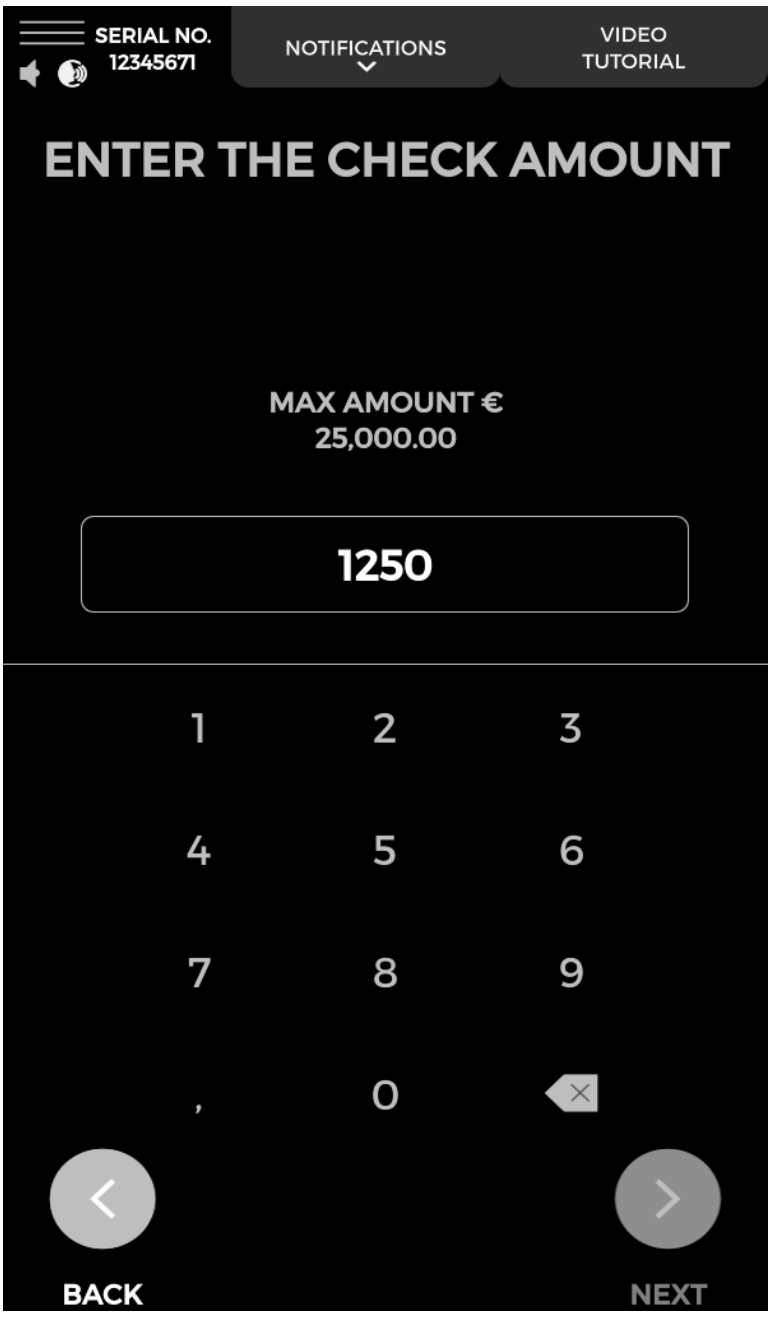

Finish Deposit

The final registration screen summarizes the declared amount you deposited into the safe using the safebag.

Press BACK to change the registration or the safebag amount.

To finish and print the receipt, press NEXT.

