Supervisor - BNA SMALL

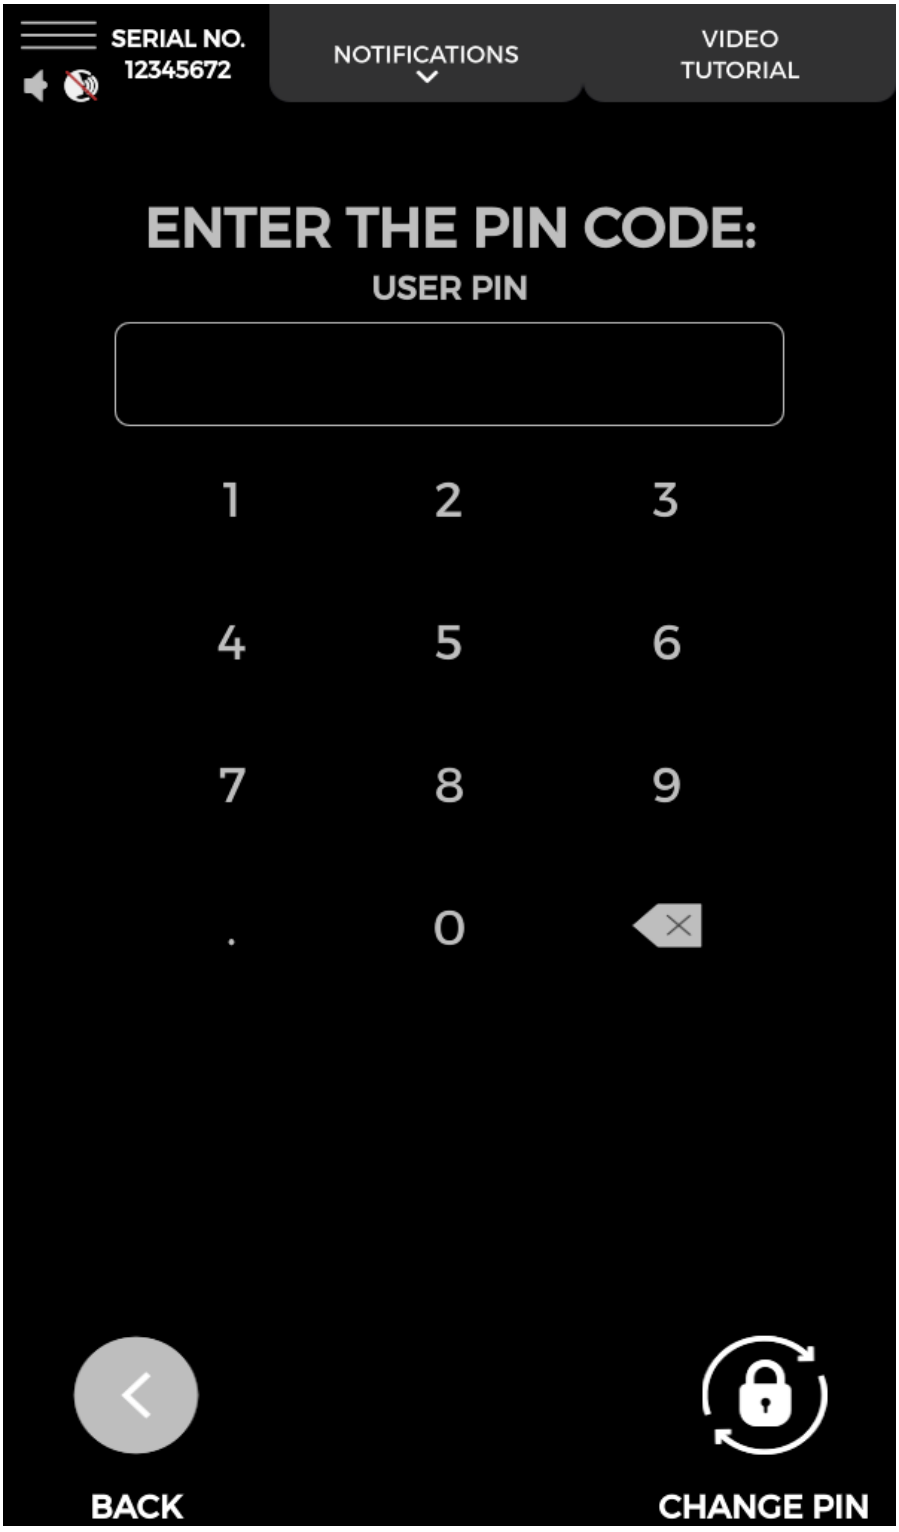
Supervisor Access

To access the **Supervisor Menu**, place the **Supervisor card** on the **RFID card reader** of the Console.



Supervisor PIN

Once the Supervisor card has been scanned, you will be asked for the PIN code associated with the Supervisor card you are using. If the Supervisor card PIN is the standard "1234," you will be asked if you want to change it. If you don't remember your PIN code, contact support.


SERIAL NO.
12345672
NOTIFICATIONS
VIDEO
TUTORIAL
ENTER THE PIN CODE:
USER PIN
1
2
3
4
5
6
7
8
9
.
0
BACK
CHANGE PIN


SERIAL NO.
12345672
NOTIFICATIONS
VIDEO
TUTORIAL
ENTER THE PIN CODE:
USER PIN
****
YOU ARE USING A
STANDARD PIN
DO YOU WANT TO
CHANGE IT?
NO
YES
BACK
CHANGE PIN